

Instruction Manual for Flat Screen TV Cleaner



Bracket

Flat Screen Cleaner



Anti-Static Brush



Cleaning Fluid

Remove Dust



Spray Evenly



Wipe Clean



Instructions:

1. Use provided anti-static brush to brush off dust particles on the screen. If dirt still remains on the screen, follow step 2.
2. At a 6 inch distance, spray provided cleaning fluid onto screen. Approximately 2 to 3 sprays are enough to clean the whole screen.
3. Once you have sprayed the screen, gently rub the flat screen cleaner across the screen surface. To clean all corners of the screen, use the triangular ends of the cleaner.
4. Place the flat screen cleaner back into the provided bracket after use.
5. We recommend cleaning the screen at least once every 2 weeks to maintain an optimal viewing experience.

Warning:

- Do not spray too much cleaning fluid as this may cause dripping.
- Do not use excess force on the screen during cleaning as this may cause damage to the screen.
- Point the cleaning fluid spray away from eyes. Consult a doctor immediately in case of eye contact with the spray.
- Only allow the microfiber side of the flat screen cleaner to touch the screen.
- Keep out of reach of children.