

Instruction Manual for The Director 105 DB Megaphone

Read through this entire instruction manual BEFORE using The Director 105 DB Megaphone.



Inserting the Batteries:

1. Open the battery compartment by pressing the button located just below the control panel of the megaphone.
2. Insert 4 'D' batteries according to polarity orientation indicated by (+) and (-) symbols inside battery compartment.
3. Close battery compartment by gently pressing down until it locks.
4. When sound becomes weak, it is time to change the batteries. Make sure to dispose of batteries according to manufacturer's instructions.

Using Your Megaphone:

1. Pull megaphone handle to full, locked extension.
2. Slide volume control to lowest volume (left).
3. Press ON/OFF button to ON position.
4. Slide volume control slightly to the right to increase amplification; slide to the left to decrease amplification.
5. Speak directly into slots in control panel with mouth as close as possible to unit.
6. Sound alarm by pressing ALARM button (second from left) on control panel. Control volume of alarm by sliding volume control left (quieter) or right (louder). Press ALARM button or OFF button to stop alarm.
7. Record speech or sound by pressing RECORD button (third from left). Press RECORD button again to release it and discontinue recording or press OFF button.
8. Play voice or sound recording by pressing PLAY button (fourth button from left). Press PLAY button again to stop playing or press OFF button.